

## Pass Thru Cabinets

Pass Thru Cabinets help control contaminants entering the clean room during pick-up and delivery of products or supplies. Delivery personnel and contaminants remain outside the clean room; therefore yield and productivity is increased because personnel remain clean and on the job.

Standard doors are 1/2" thick clear acrylic with aluminum handles, full length piano hinge, manual interlock, tension catch and are gasketed for positive seal. Doors 30" and wider are equipped with a structural integrity bar.


Several material combinations are available:

- White high pressure laminate on all interior and exterior surfaces with 3/4" thick, high density particle board core for widths up to 28". Larger Pass Thru Cabinets have a 1" thick core for structural integrity.

- All steel construction w/white powdercoat finish.
- All stainless steel construction.

We offer custom designed Pass Thru Cabinets to meet unique requirements. Some of these designs are illustrated on these pages. Consult with the factory for more information.

Ordering Information, standard sizes and mounting options are on the following page.

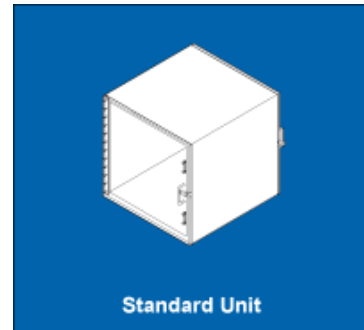



[\[back to top\]](#)

<b>Ordering Information (For Pass Thru Cabinet Units)</b>			
White Laminate on All Interior And Exterior Surfaces	All Steel Construction w/ White Powdercoat Finish	All Stainless Steel Construction	
Model No.	Model No.	Model No.	Exterior Dimensions H" x W" x D"
15100	15200	15400	12" x 12" x 12"
15101	15201	15401	12" x 12" x 18"
15102	15202	15402	14" x 14" x 18"
15103	15203	15403	18" x 18" x 18"
15104	15204	15404	24" x 24" x 24"
15105	15205	15405	24" x 30" x 24"
15106	15206	15406	30" x 30" x 30" *
15107	15207	15407	30" x 30" x 36" *
15108	15208	15408	36" x 36" x 36" *
* With 1" Thick Core			

Notes: Add approximately 4" to the depth dimension to include doors and handles. Rough cut hole in wall should be 1/8"-1/4" larger than O.D. of the Pass Thru Unit.

All Pass-Thru Cabinets are shipped in a wooden crate.

<b>Ordering Information (For Mounting Components)</b>		
Mfg. Code	Description	Figure #
15900	Mounting Trim, White Painted Aluminum	1
15901	Mounting Trim, Stainless Steel	1
15902	Support Gussets, (2 req'd.) for 12"-18" depth Offset Mount.	2
15903	Support Gussets, (2 req'd.) for 24" depth.	2
15904	Support Gussets, (2 req'd.) for 30"-36" depth.	2
15907	Support Gussets, Center Mount.	3
Consult with the factory for correct lengths.		

**Cleaning and Maintenance Instructions:**

Use *Stryk-It* Cleanroom and Laboratory Cleaner with a lint free cloth. Do not use any abrasive or any type of cleaner containing alcohol or ammonia which will cause severe cracking or "crazing" and will void the warranty on the component and/or structure.

Consult with the factory for more information about *Stryk-It* products.

[\[top\]](#)

[\[home\]](#)

[\[built to order passthru\]](#)

[\[supplies\]](#)

[\[companystore\]](#)

[contact us](#) for more information.